

# INSTRUCTIONS

## Crowd Blocker Barriers

### COMPONENTS



1 Barrier Panel



2 Connectors



2 Rubber Feet

### ASSEMBLY


Step 1. Insert the solid end of the Connector into the hole of the Rubber Foot. Repeat for the other foot.



Step 2. Using a sturdy block as a lever, turn the Connectors counterclockwise until the pronged ends are in line with the rubber feet, as shown.



Step 3. Align the Panel over the two pronged ends of the Connectors. Carefully push down on the Panel until the Connector prongs click into each side of the panel.

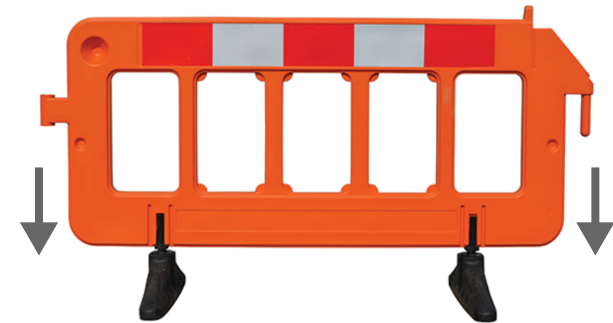

Step 4. Connect multiple Barriers with the linking brackets to achieve the desired configuration.

